

---

## Contents

Note before use.....	2
Operation for Achat European Standard Fingerprint Lock (Basic mode ) .....	3
1. Notes for functional buttons.....	3
2. Save fingerprint.....	3
3. Store password.....	4
4. Delete fingerprint.....	5
5. Keep unlocking.....	7
6. Opening the door with fingerprint or password.....	7
7. Non –disturbance.....	8
8. Checking on user’s ID number and the remaining space.....	8

**Can be fit automatic locking Europe lockset.**

***/standart or multipoint systems./***

## **Note before use**

### **1. Memory capacity**

50-100 fingerprints /optional/

### **2. Authority management**

2 levels .The first 2 persons are administrators, 13persons are users.

Only administrators can store and delete users' fingerprints and have password authority.

### **3. Alarm for abnormal unlocking**

The lock will alarm under the abnormal unlocking condition. To stop the alarm, please take off the battery.

### **4. LED Display**

User's ID: 01-15	Fingerprint memory space :15-00
Empty user :UU	Full users: FU

### **5. Low battery prompt**

While opening the door, 6 beeps indicate the battery is low. Need to replace batteries. The lock still can use about 200 times.

# Operation for Achat European Standard Fingerprint Lock (Basic mode )

## 1. Notes for functional buttons



## 2. Save fingerprint

### (1) Save administrator's fingerprint



① Press power on button.



② Long press SAVE button and hear beep, LED displays 01.



③ Put fingerprint on the scanning window, when hearing a beep, reposition the finger to scan the second fingerprint. Once success, hearing 2 prompt beeps, LED displays 02.


**After every administrator store fingerprint successfully, the lock will power off .The administrator must verify fingerprint, then go to the next step.**

**(2) Save users' fingerprints**



① Press power on button, the administrator verify the fingerprint or password successfully.



②LED displays the available ID number. Press  button to select ID number.



③Long press SAVE button to store user's fingerprint (the same as above for administrator ) .

**If not power off, you can continuously store users' fingerprints until memory is full (LED displays FU)**

**3. Store password (4-12 digits password)**



①Press power on button, the administrator verify the fingerprint successfully.



②Long press save button, LED display password Number. Sliding over the cover, again long press save button until hearing prompt beep, indicate to input password.



③After inputting the password, press ENTER button to confirm.



④After the password store successfully, closing the cover, otherwise it will alarm with beep after 5 seconds.

***While inputting password, if need to modify password, press CLR button to wait LED displays “00”, then input again.***

***If the password inputting less than 4 digits ,press ENTER button .If over than 12 digits, it will prompt beep to indicate error operation.***


#### **4. Delete fingerprint**

(1) Delete users' fingerprints one by one (03-15)



① Press power on button, the administrator's or password verify fingerprint successfully.



② Long press Delete button, LED display ID Number .Press  button to select the user to be deleted.



③ Long press DELETE button. Hearing prompt beep, i.e. deletion is successful.

(2) Delete all of the saved fingerprints quickly(01-15)



① Press power on button, the administrator's fingerprint or password verify successfully.



② Press STORE and DELETE button at the same time. Hearing prompt beep, LED displays “UU”, i.e. deletion is successful.

### (3) Replace administrator's fingerprint

***You can only replace the administration's fingerprint or password, but can't delete it, while there have fingerprint or password in the lock.***



① Press power on button, the administrator verify the fingerprint .



② Press DELETE button, hearing prompt beep to indicate storing replacer' s fingerprint.



③ After replaced fingerprint , hearing prompt beep, i.e. replacing is successful.

### (4) Forcedly delete administrator' s fingerprint

The administrator's fingerprint can be deleted directly without verification, but there should no user's fingerprint in the memory.



①Press DELETE button and hold. Press power on button, hearing prompt beep, then remove DELETE button.



②LED displays " UU " , i.e. deletion is successful.

## 5. Keep unlocking

### *Set up*



① The administrator verify the fingerprint or password successfully.



② Before power off, turning the indoor knob, it shows "Red" color.



③ Turning the handle, making the indoor knob into the normal position, it shows "green" color.



④ Press power on button, the function will be automatically released after the power off.

## 6. Open the door with fingerprint or password

### *Open the door with saved fingerprint*



① Press power on button.



② Putting the saved fingerprint on the scanning window to verify, 2 prompt beep indicate the door is open.

### *Open the door with saved password*



① Sliding over the cover to power on, hearing a prompt beep, then input password.



② After finish it, press ENTER button, hearing a prompt beep, then open the lock.

## 7. Non –disturbance

### Set up



Turning the indoor knob to “RED” position.

### Release




Turning the indoor handle to “Green” position.

***The prize-proof and alarm function of the door and lock will shut down automatically while using the Non-disturbance function.***

## 8. Checking on user’s ID number and the remaining space


### Check on user’s ID number



Unlocking the door, press  button to check the user’s ID number.

### Check on the remaining space



Press  button to check the remaining space.