

## Contents

Note before use.....	2
Operation for Achat European Standard Fingerprint Lock (Basic mode ) .....	3
1. Notes for functional buttons.....	3
2. Save fingerprint.....	3
3. Store password.....	4
4. Delete fingerprint.....	5
5. Keep unlocking.....	7
6. Opening the door with fingerprint or password.....	7
7. Non –disturbance.....	8
8. Checking on user’s ID number and the remaining space.....	8

### **Note before use**

#### **1. Memory capacity**

15 persons ,30 fingerprints

#### **2. Authority management**

2 levels .The first 2 persons are administrators, 13persons are users.

Only administrators can store and delete users' fingerprints and have password authority.

### 3. Alarm for abnormal unlocking

The lock will alarm under the abnormal unlocking condition. To stop the alarm, please take off the battery.

### 4. LED Display

User's ID: 01-15	Fingerprint memory space :15-00
Empty user :UU	Full users: FU

### 5. Low battery prompt

While opening the door, 6 beeps indicate the battery is low. Need to replace batteries. The lock still can use about 200 times.

## **Operation for Achat European Standard Fingerprint Lock (Basic mode )**

## 1. Notes for functional buttons



## 2. Save fingerprint

(1) Save administrator's fingerprint



① Press power on button.



② Long press SAVE button and hear beep, LED displays 01.



③ Put fingerprint on the scanning window, when hearing a beep, reposition the finger to scan the second fingerprint. Once success, hearing 2 prompt beeps, LED displays 02.

**After every administrator store fingerprint successfully, the lock will power off. The administrator must verify fingerprint, then go to**